

Selectronics

WORDFINDER®

WF225

THESAURUS • SPELL CHECKER • DEFINITIONS

with Flash Card (vocabulary builder), Jumble Key for unscrambling words plus other unique features.

Features:

- 100,000 spelling words with phonetic corrections (includes major cities, states and countries)
- 660,000 Synonyms
- Flashcard Vocabulary Builder
- Definitions for over 50,000 words
- Up to 10 unknown letters per word.... ideal for crossword puzzles and Hangman
- Jumble Key for unscrambling words
- Batteries included
- Small enough to fit into your pocket, purse, or briefcase



OWNERS MANUAL

IMPORTANT

This equipment uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for a Class B computing device in accordance with the specifications in Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient the receiving antenna

Relocate the *WordFinder*® with respect to the receiver

Move the *WordFinder*® away from the receiver

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions. The user may find the following booklet prepared by the Federal Communications Commission helpful: "How to Identify and Resolve Radio-TV Interference Problems"

This booklet is available from the U.S. Government Printing Office, Washington, DC 20402, Stock No. 004000003454.

TABLE OF CONTENTS

Quick Start	13
About the <i>WordFinder</i> ®	17
Overview	19
Using the <i>WordFinder</i> ®	24
Keystone Entry	24
Spell It	25
Wildcard	28
Thesaurus	30
Define	34
Jumble	38
FLASHCARD vocabulary builder	40
How to Install/Change Batteries	42
Helpful Hints	44

PRECAUTIONS

Always handle with care as the liquid crystal display is made of glass. Do not carry in any pocket of slacks or trousers. Avoid hard impact. Physical breakage of the display is NOT covered by warranty.

When pressing the reset button, press it lightly. Excess pressure is unnecessary and may damage the switch.

Keep away from moisture, dust, and extreme temperatures which may cause a malfunction. Do not leave in a parked car exposed to direct sunlight.

Do not tamper in any way with the ribbon cable which connects the two halves of the *WordFinder*® together.

Use a soft, dry cloth to clean. Never use a wet cloth or solvents.

If service is required, use only SELECTRONICS repair service.

SelecTronics, Inc.
701 Decatur Avenue North
Building 204
Minneapolis, Minnesota
55427
(612) 545-6823

Note. Damage caused by failure to heed the above precautions is considered misuse/abuse as defined under the terms of the ninety day limited warranty.

FEATURES

- Pocket size for easy transport
- 100,000 word spelling dictionary
- 660,000 synonym thesaurus
- Definitions for over 50,000 words
- FLASHCARD Vocabulary Builder
- Large 20 digit display with 10 operation indicators
- "QWERTY" style keyboard with raised keys
- Key tone entry (suppressible)
- Auto shut-off (after two minutes of key inactivity)


EXPLANATION OF KEYS

1. **ON/OFF:** Press once to turn on (ready for immediate entry of a word), press second time to turn off. If no key is pressed for 2 minutes, *WordFinder*® will automatically shut off to conserve the batteries.
2. **ORIG:** When held down for less than three seconds, displays the original word entered. When held down for three seconds or longer, replaces the current word with the previous word. If the word entered generated a message such as **WORD UNKNOWN**, then the message will be replaced by that word immediately upon pressing the **ORIG** key. This allows you to correct the word by using the **◀** key, or by simply adding extra characters to the end of the word.
3. **CLEAR:** Clears display for entry of new word.

4. **SPELL:** Press to check spelling after word is entered. If word is spelled incorrectly, the display will alternate between the word entered and the message **PRESS SPL TO CORRECT**. Press **SPELL** again to correct the spelling or to view alternates.
5. **SYN:** Displays synonyms for the word entered.
6. **DEF:** Displays definitions for the word entered.
7. **JBL:** Displays all valid words which can be formed from the letters currently displayed on the screen (These are known as Anagrams).
8. **▼:** Displays different 'main concept' synonyms for the original word in **SYNONYM** mode, or different definitions in **DEFINE** mode.
9. **▲:** Displays previous main concept synonyms which were displayed while using the **▼** key in **SYNON** mode, or

previous definitions in DEFINE mode.

10. ►: Displays the next synonym with the same meaning for the main concept word in SYNONYM mode, or moves the display one word to the right in DEFINE mode.
11. ◄: a) Deletes previously entered characters, from right to left, one at a time. b) Displays previous synonyms/definitions which were displayed while using the ► key.
12. ⏻ /': a) Apostrophe b) Hold for three seconds to turn the key tone on or off.
13. ?: Wildcard; used in place of unknown letters (up to ten) to identify those letters (appears as an asterisk).
14. **KEYBOARD:** Layout is in standard typewriter "QWERTY" format.

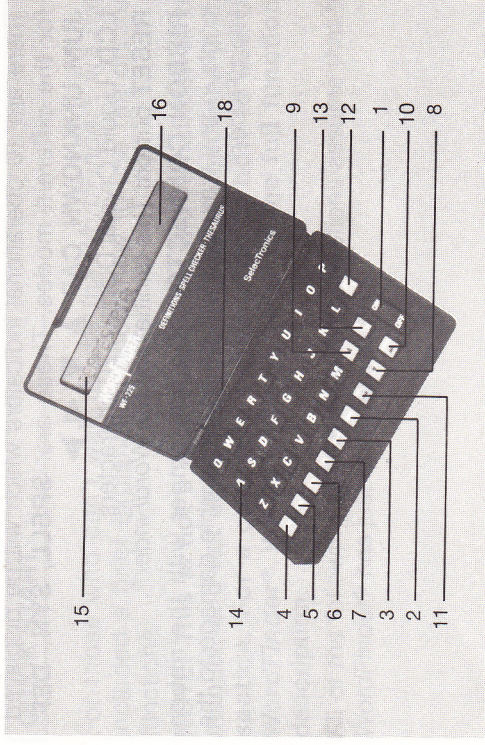

15. There are 10 operational indicators which will be displayed for the different modes. These are: **SPELL**, **SYN**, **DEF**, **JUM**, **UNKNOWN**, **CAP**, **▲**, **▼**, **◀**, **▶**.
16. **LCD**: Liquid Crystal Display; 20 characters.
17. **RESET** button: This reinitializes the *WordFinder*[®].
18. **RIBBON CONNECTOR**: Do not tamper with the ribbon cable in any way, as it will cause irreparable damage to the *WordFinder*[®].

QUICK START

For those who can't wait to use the *WordFinder*[®] we have included a brief explanation about how to use the different functions.

NOTE: This is not a replacement for the remainder of the manual, and not all related information is contained in this section. For a complete explanation of how to use the *WordFinder*[®] WF-225, please refer to the full functional description.

All of the following QUICK START descriptions assume that the *WordFinder*[®] has just been turned on...

SPELL MODE

Type in the word.

Press the **SPELL** key.

If the **UNKNOWN** indicator lights and the display alternates between the word entered and the message **PRESS SPL TO CORRECT**, press **SPELL** again. Correctly spelled alternates will be displayed.

THESAURUS MODE

Type in the word.

Press the **SYN** key.

Scroll through different synonyms by using the arrow keys.

DEFINITION MODE

Type in the word.

Press the **DEFINE** key.

Scroll through the first definition by using the left and right arrow keys, as indicated by the display indicators ◀▶.

Display different definitions by using the up and down arrow keys, ▲▼.

JUMBLE MODE

Type in maximum of six letters.

Press **JBL** key.

Press **JBL** key repeatedly until there are no more anagrams found.

FLASHCARD MODE

Press the ?/* key once.

Press **DEFINE** key. (A random word will be displayed)

Press **DEFINE** key again to define the word. (See **DEFINE MODE** usage above.)

ABOUT THE WordFinder®

The *WordFinder*® 225 is a multiple function device which checks spelling, offers alternate spelling using phonetic rules which look up similar sounding words. *WordFinder*® even checks the spelling of First Names, Surnames, Corporate Names, Major Cities, States, and Countries of the world along with indication of capitalization where applicable.

The powerful synonym feature provides an enormous wealth of synonyms for many senses of meaning for the entered word.

WordFinder® provides concise definitions for over 50,000 words, including thousands of words used on college entrance exams.

A unique FLASHCARD feature selects a word at random for you

to guess the meaning. This feature will teach you many new words in just a few minutes!

The wildcard function finds words when some of the letters (up to 10) are missing, which is a handy feature for playing word games like Hangman, crossword puzzles, Scrabble®, and even Wheel of Fortune.

The Jumble key unscrambles words (up to 6 letters). Jumble is also a syndicated game featured in many newspapers across the country.

The *WordFinder*® does it all and is still small enough to fit into your pocket, purse, or briefcase. Congratulations! You now own the most powerful electronic dictionary/thesaurus available for the English language.

OVERVIEW

The *WordFinder*® WF-225 is an extremely versatile and compact electronic device which can correct spelling, and provides both synonyms and definitions. It can verify and correct the spelling of one hundred thousand words used in modern American English. In total, there are six hundred and sixty thousand synonyms available within the *WordFinder*®. Furthermore, the *WordFinder*® WF-225 contains definitions for more than fifty thousand words.

But that's not all... the *WordFinder*® WF-225 has more exciting features. The **FLASHCARD** self improvement vocabulary builder will help extend your knowledge of the English language. This feature will repeatedly supply words completely at random — words which you may have never even seen before! When a

word appears that you don't understand, just press the **DEFINE** key and the word's meaning will appear in the display. By defining the words or phrases, the *WordFinder*® WF-225 will indeed help build your vocabulary! Incidentally, the FLASHCARD feature can also be used with the **SYN** key.

The **JBL** key will provide anagrams for any word or random letter group entered. There is a maximum of six characters which may be entered in the JUMBLE mode, and because the *WordFinder*® finds anagrams of the word, all letters entered must be used to create the word.

SOME NOTES ON THE DEVELOPMENT OF *WordFinder*® ...

It has been said that there is no such thing as a true synonym in the English language. No two words mean exactly the same thing. Words have their own nuance and tone, even when expressing the same concept. And many words have more than one meaning, so one may be more appropriate than another depending on the particular document and context in which the word appears. "Clear," for example, can mean everything from bare, to definite and understood, to sunny, to translucent. And that is before one considers its use as a verb, where it empties, exonerates, clarifies, surmounts, and repays. Thus, the creation of a thesaurus tends to be much more of an art than a science. The presentation of alternative words should be more than just a presentation of very close, almost clinically exact substitutes. The writer may be searching for just a cat's

hair variance of meaning, just enough to tone something up or down a trifle; or he or she may be searching for a word on the far reaches of the word in mind, way out on the tip of the tongue, waiting to be found. The impact of the English language on the landscape of the human mind is broad and varied, and we have tried to provide as broad an array of choices as possible. So, when you need to be as precise as can be, a push of the buttons on your *WordFinder*® will give you quick, close alternatives or a creative new perspective.

When we designed the *WordFinder*®, we tried to keep in mind the breadth of purpose it will be called on to provide. We try to offer as many of the meanings a word might convey while staying contemporary. We do not wish to be burdened with archaic meanings of times gone by. However, we wanted to cover as much of the variety and nuance of the language as


possible to give you maximum power of expression. If a word is commonly used in the vocabulary of today's businessperson, we tried to include it.

USING THE WordFinder®

KEYTONE ENTRY

The WordFinder® WF225 can either work silently, or with an audible tone each time a key is pressed. This tone can be turned on or off whenever you wish. The procedure to turn the tone on is the same procedure to turn the tone off.

To turn the tone on or off:

1. Press and hold the  /, key until you hear the beep (this will be heard after approximately three seconds). (NOTE: The keytone is reset to off any time the reset button is pressed or batteries removed.)

SPELL IT

One of the main features of the WordFinder® is its ability to check and, where necessary, correct your spelling. The WordFinder® will do this phonetically.

To use the spelling function:

1. Turn on the WordFinder®
2. Enter the word you wish to check the way you think it is spelled. If you happen to press a wrong letter, press the ◀ key to delete the letter and reenter the letter correctly.
3. Press **SPELL**: "SEARCHING FOR WORD" will appear for a moment. If the word has been spelled incorrectly, the display will toggle back and forth between the word entered and the message **PRESS SPL TO CORRECT**. Also, the **SPELL** and **UNKNOWN** indicators will both be displayed. If

keytone has been turned on, a double beep will sound. (If the word is correct a single beep will sound and only the **SPELL** indicator will be displayed. The next step can then be skipped.)

4. Press **SPELL**: A series of alternative words is generated, and the first alternate is displayed. If there are more words, they will be indicated by the flashing **▲** in the display. To view the additional words, press **▲** repeatedly. When all the words have been shown, ***** END ***** will be displayed. The **▼** key can be pressed at any time to review words previously displayed. Alternative words can be displayed even when the word you entered was spelled correctly. Press the spell key a second time, and then use the **▲** and **▼** keys to view other words that are spelled similarly. At any time during the spell function, press and hold the **ORIG** key

to refer to the original word entered. If there are no alternate words found, then the message "**NO ALTERNATES FOUND**" will be displayed.

(NOTE: If a word should be capitalized, the **CAP** indicator will be displayed and the letter to be capitalized will be blinking.)

WILDCARD

The wildcard function allows you to find words when some of the letters are unknown. This function will allow up to ten unknown letters to be inserted in a word to find a correct spelling. This will provide a list of possibilities. The wildcard, which is a question mark on the keyboard, will appear as an asterisk on the display. This feature can be most helpful for solving crossword puzzles or for playing Scrabble®, etc.

To use the wildcard function:

1. Make sure the *WordFinder*® is on.
2. Enter the word and press ? key for any letters of which you are unsure of (the ? key can be used to replace as many as ten letters in a word).

3. Press **SPELL**: "SEARCHING FOR WORD" will be displayed until a word is found. If a word cannot be found that matches the letters you have entered, the message "NONE FOUND" will be displayed. If a word is displayed, the right arrow indicator may be flashing to inform you of more possibilities. Use the ► and ◀ keys to view the remaining words.

(NOTE: If more than ten wildcards are entered, the message "TOO MANY WILDCARDS" will be displayed.)

THESAURUS

Another feature of the *WordFinder*® is its ability to provide an abundance of synonyms for a single word. The thesaurus is structured so that for most words you receive one or more 'main concept' words from which you may view several words with similar meanings.

The first few synonyms in each meaning group help you quickly determine the meaning of that group of synonyms. The remainder of the synonyms will be in alphabetical order. There are four arrow indicators that indicate which arrow keys to press for more synonyms.

To use the Thesaurus:

1. Make sure the *WordFinder*® is on.
2. Enter the word for which you want synonyms.

3. Press **SYNON**: "SEARCHING FOR WORD" will appear for a moment. The first synonym will then appear on the display. If there are more synonyms for that word, the arrow indicators will flash on and off to show which arrow keys should be pressed to find any other synonyms. The up/down arrows show the main concept synonyms. The left/right arrows show the synonyms with a similar meaning to each of the main concept words. Use the ▼ and ▲ keys to view each of the main concept synonyms. Use the ► and ◀ keys to view the synonyms with the same meaning as each of the main concept words.

If the word entered is spelled incorrectly, the message *WORD UNKNOWN* will be displayed. If the word is spelled correctly, but there is no synonym for that word, the message *NO SYNONYMS FOUND* will be displayed. At any time during the

synonym function, press and hold the **ORIG** key to refer to the original word. As an example of how the thesaurus operates, consider the word "NUT". Enter the word "NUT" and then press the **SYN** key: the first synonym which appears is "ECCENTRIC". The right arrow will be flashing to inform you of more words with the same meaning for the word "ECCENTRIC". Press the right arrow key and you will see the words "ODDBALL, CARD, and CHARACTER" plus others. The left arrow will be flashing to inform you of words you have already seen which you can review. Press the down arrow key to see the next main concept word for "NUT" which will be "BOLT". Press the right arrow key and you will see the words "PIN, BRAD, and PEG" plus others. These are all synonyms with the same meaning for the word "BOLT". You can again use the left arrow key to review the synonyms for the main concept word "BOLT". Press the down arrow key to see the last main concept word which is

"ENTHUSIAST". Press the right arrow key to view words like "FANATIC, BUG, and CRUSADER" plus many more. You can again use the left arrow key for review. Now, you have not only seen many of the synonyms, but also defined the word "NUT". This can be very useful for understanding a word's meaning of which you are unsure.

DEFINE

The following procedure will allow you to obtain a definition for a word that you've entered, or which the unit has displayed. A unique feature of the **DEFINE** function in the *WordFinder*® is if you do not understand a particular word within a definition, you can then use the **DEF** button again to obtain the definition for that word!

To use the Definition function:

1. Enter the word for which you wish to obtain a definition.
(You may either type in the word yourself, or use a *WordFinder*® supplied word from any of the **SPELL**, **SYNONYM**, **DEFINE**, or **JUMBLE** functions.)
2. Press the **DEF** key: the beginning of the definition will be displayed. Complete words will be displayed as you scroll

through the entire definition. The **▶** and **▼** symbol's may be flashing indicating that there are additional words to the right of the first, and/or additional definitions for the word.

3. Press the **▶** key repeatedly to scroll through the entire definition, one word at a time. Use the **◀** key repeatedly to review the definition. If you see a word in the definition which you do not understand, position that word left-most in the display by using the **◀** or **▶** keys. Then press the **DEF** key again to define that word.

Note: If the word entered is spelled incorrectly, the *WordFinder*® will prompt you to press the **SPELL** key to correct the spelling. Once you have pressed the **SPELL** key and selected the correct spelling, you will have to press the **DEFINE** key again to obtain the desired definition. However, if the word is spelled correctly but there is no definition for that word, then the message **NO**

DEFINITIONS FOUND will be displayed.

At any time during the definition function, press and hold the **ORIG** key to refer to the original word. If you hold the **ORIG** key for three seconds or longer, the original word will replace the current word.

As an example, enter the word "INTEGRATE" and then press the **DEF** key. The display shows *UNITE (PARTS)*, and both the ▼ and the ► are flashing. This indicates two things. First, there are more words to the right of the first word in this definition (in this case *(PARTS)*), and second, that there is also at least one more complete definition of the word. The significance of *PARTS* appearing in parentheses is to convey the meaning which *UNITE* is to take: i.e. Integrate means to join two or more parts together, or to unite them. Press the ▼ and the display then shows the definition: *MAKE INTO A WHOLE*.

Assume that you do not understand the word *WHOLE*. Press the ► key three times: This scrolls the display to the right three words, making the word *WHOLE* the left-most word in the display. Press the **DEF** key again, and the display shows *COMPLETE* with the ▼ flashing. You could now press the ▼ key two times to display the additional definitions *ENTIRE* and *ALL*. With any of these definitions on the display, pressing the **ORIG** key will cause the word *WHOLE* to be displayed, as this is the word being defined. Holding the **ORIG** key for three seconds will reenter "WHOLE" in the display, allowing you to execute another *WordFinder*® function on the word "WHOLE", such as *SYNONYM*.

JUMBLE

This is a syndicated game played in many newspapers. It consists of jumbled letters that make up words when correctly arranged (anagram). The jumble feature can rearrange a maximum of six letters. If no word can be found which is an anagram of those letters, then the message "*NONE FOUND*" will be displayed. If more than six letters are entered the message "*WORD TOO LONG*" will be displayed.

To use the jumble function:

1. Make sure the *WordFinder*® is on.
2. Enter the jumbled letters.
3. Press **JBL**: The *JUM* indicator will be displayed and "*SEARCHING FOR WORD*" may appear for a moment; then a

word will appear. Press **JBL** repeatedly to find all the combinations. When the last word has been found, "**** END ****" will be displayed for a moment. To review the combinations again, press **JBL** for each word. If words cannot be created with the letters entered, then "*NONE FOUND*" will be displayed.

At any time during the jumble function, press and hold the **ORIG** key to refer to the original letters entered.

FLASHCARD FUNCTION

The FLASHCARD feature will help you increase your mastery of the English language. At the push of a button, *WordFinder*® will select one of the many words it knows. The *WordFinder*® pauses after displaying the word, enabling you to think of synonyms or the definition of the word, before displaying the correct answer. This function may be used to increase your vocabulary and provide hours of fun and enjoyment!

To use the FLASHCARD function:

1. Turn the *WordFinder*® on.
2. Press the **WILDCARD** (?/*) key once.
3. Press either the **DEFINE** key or the **SYN** key.

A word will be shown on the display. Guess the word's meaning or synonym.

Pressing the **DEFINE** key will display the definition of the word. Use the arrow keys as indicated.

The **FLASHCARD** feature may also be used to generate words for which the *WordFinder*® has synonyms. See how many senses of meaning and synonyms for each sense you can come up with, then press the **SYN** key and use the arrow keys to see how many synonyms the *WordFinder*® knows.

HOW TO INSTALL/CHANGE THE BATTERIES

Battery size: 4 x SR44, S 76, EPX 76, RW 42, V 13 GS, MS 76, NR 44, EP 675 E, RP 675, V 675 HP, or MP 675 H silver oxide or mercury cells. Alkaline cells will not function efficiently in the *WordFinder*®, you should use one of the types listed above.

1. To replace the batteries, put your thumb-nail into the groove of the battery compartment and pull the battery clip out of the case.
2. Remove the old batteries.
3. Reinsert the new batteries ensuring that the positive (+) side of the batteries face out, corresponding to the + sign on the battery clip.
4. Push the battery clip back into the case of the *WordFinder*®.

5. Press the reset button which is accessible through the back of the *WordFinder*®.

NOTE: A diagram of the battery clip may be found on the inside back cover.

HELPFUL HINTS

If the *WordFinder*® does not turn on, remove the battery clip and check the polarity of the batteries. Replace the battery clip and press the reset button.

If the jumble function does not seem to work, be sure you are not entering more than six letters in the display. All the letters entered must create a word (ie. if six letters are entered all six letters must be used to create a word).

When using the synonym feature, if a word is not found, try the root of the word (ie. "WORDINESS" returns NO SYNONYMS FOUND. However "WORDY" returns VERBOSE, TALKATIVE, BOMBASTIC, CHATTY, DIFFUSE, etc.)

When using the *WordFinder*® to find the correct spelling of proper nouns, the first spelling correction shown may not be the

word you need. To find the word you need, press the ► key repeatedly until you see the desired word.

Multi-word groups such as NEW YORK or FRENCH FRY must be entered as two separate words to be verified by the **SPELL** function. It is not possible to enter NEW YORK and then press the **SPELL** key to check the spelling; however, it is perfectly allowable to enter ANY state (such as NEW YORK) and some phrases (such as FRENCH FRY) in full and then press the **DEFINE** key to display its definition.

When holding down the **ORIG** key, or while the *WordFinder* is searching for words, the display will momentarily dim to conserve battery life.

All *WordFinder*® spellings and synonyms are those typically used in contemporary American English.

WARRANTY

SELECTRONICS, INC.

90-DAY LIMITED WARRANTY

In consideration of your purchase of the SelecTronics *WordFinder*® Model No. WF-225 (the "Product") for the price paid, SelecTronics warrants, only to the original consumer Purchaser, that the Product is and will remain free of defects in material and workmanship for ninety (90) days from the date of sale to Purchaser, subject to the exclusions and limitations set forth below.

EXCLUSIVE REMEDY

If, in the opinion of SelecTronics, the Product is or becomes defective in material or workmanship during the warranty period, you must return it to SelecTronics at 701 Decatur Avenue North, Building #204, Minneapolis, Minnesota, 55427, U.S.A. with proof of the date of purchase and a written explanation of the defect. SelecTronics will repair or replace the Product and ship it to the Purchaser without charge. Repair or replacement does not renew or extend the warranty period.

THIS REMEDY IS THE EXCLUSIVE REMEDY FOR BREACH OF ANY WARRANTY AS TO THE PRODUCT, except for personal injury.

EXCLUSIONS AND LIMITATIONS

THIS WARRANTY DOES NOT COVER AND SELECTRONICS DISCLAIMS LIABILITY FOR DAMAGE TO THE PRODUCT'S CASE OR PACKAGING OR DAMAGE FROM EXTERNAL IMPACT, WATER OR OTHER FORCES.

THIS WARRANTY DOES NOT COVER AND SELECTRONICS DISCLAIMS LIABILITY FOR INJURIES OR LOSSES CAUSED BY OR ASSOCIATED WITH A PRODUCT THAT HAS BEEN ALTERED, DAMAGED OR MISUSED.

PURCHASER HAS NOT RELIED UPON AND SELECTRONICS EXCLUDES ANY AND ALL OTHER EXPRESS WARRANTIES, AND ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO

THE NINETY-DAY DURATION OF THE EXPRESS WARRANTY PERIOD. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

SELECTRONICS HAS NO LIABILITY TO PURCHASER OR OTHERS ARISING IN CONTRACT, WARRANTY OR NEGLIGENCE FOR, AND DISCLAIMS, ANY CONSEQUENTIAL, INCIDENTAL OR SPECIAL DAMAGES CAUSED BY OR IN CONNECTION WITH THE PRODUCT, ITS USE OR MISUSE, OR PERFORMANCE OR NON-PERFORMANCE. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

For Your Records

To assist in processing any warranty claims that may arise, please complete the following information:

Product Serial No.: _____

Place of Purchase : _____

Date of Purchase (also attach copy of receipt or invoice): _____

*WordFinder is a registered trademark of Microlytics, Inc.
P.S. SELECTRONICS is now traded over the counter in the NASDAQ National Market System under the symbol SELE.


1989 PROPERTY OF SELECTRONICS, INC. Minneapolis, MN USA 55427

© COPYRIGHT 1989 BY SELECTRONICS, INC. Minneapolis, MN USA 55427

PRINTED IN HONG KONG

WF 225

BATTERY REPLACEMENT DIAGRAM

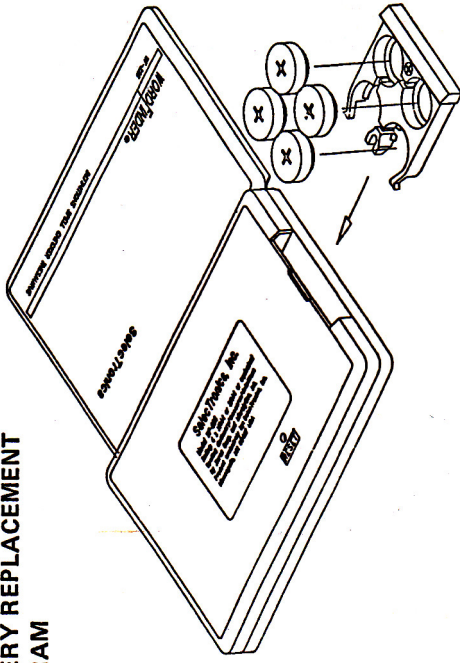

QUICK REFERENCE CARD

For those who can't wait to use the WordFinder® we have included a brief explanation about how to use the different functions.

NOTE: This is not a replacement for the remainder of the manual, and not all related information is contained in this section. For a complete explanation of how to use the WordFinder® WF225, please refer to the full functional description.

All of the following QUICK START descriptions assume that the WordFinder® has just been turned on...

SPELL MODE — Type in the word — Press the **SPELL** key

If the **UNKNOWN** indicator lights and the display alternates between the word entered and the message **PRESS SPL TO CORRECT**, press **SPELL** again. Correctly spelled alternates will be displayed.

THESAURUS MODE — Type in the word — Press the **SYNON** key

Scroll through different synonyms by using the arrow keys.

DEFINITION MODE — Type in the word — Press the **DEFINE** key

Scroll through the first definition by using the left and right arrow keys, as indicated by the display indicators.

Display different definitions by using the up and down arrow keys,

JUMBLE MODE — Type in maximum of six letters — Press **JUMBLE** key

Press **JUMBLE** key repeatedly until there are no more anagrams found.

FLASHCARD MODE — Press the **?/*** key once — Press **DEFINE** key.

(A random word will be displayed)

Press **DEFINE** key again to define the word. (See **DEFINE MODE** usage above.)